

-INSTALLATION

- Take coupler lock frame and slide it over Shift Lock® of gooseneck frame making sure it is flush with the bottom of coupler (Figure 1).
- Insert lock handle into the bottom insert for 2-5/16" couplers OR the top insert for 3" couplers (Figure 2 & 3).
- Attach padlock of choice (**sold separately**) to the lock handle (Figure 4)



Figure 1: Slide coupler lock frame over Shift Lock®



Figure 2: Insert lock handle through inserts

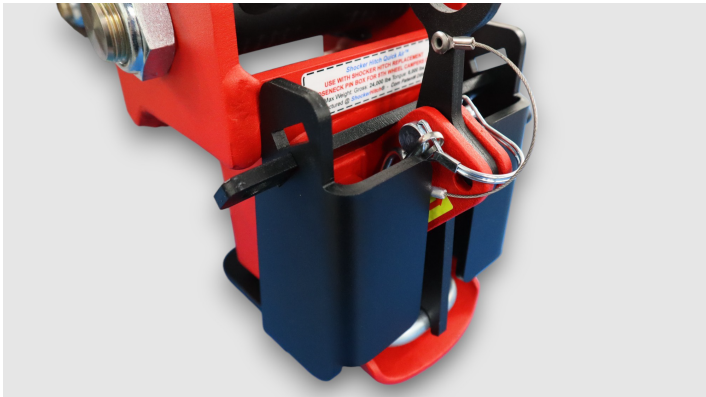


Figure 3: Top insert for 3" couplers, bottom insert for 2-5/16" couplers



Figure 4: Attach padlock of choice to lock handle (sold separately)