

-INSTALLATION INSTRUCTIONS - SHIFT LOCK GOOSENECK COUPLER LOCK (SH-9050)

Step 1: Unlock the Handle

- Remove the quick clip pin from the Shift Lock handle.
- Push the handle forward to the unlocked position

Step 2: Position the Coupler Lock

- From underneath the coupler, slide the Shift Lock Gooseneck Coupler Lock over the coupler as shown (Figure 2).

Step 3: Engage the Lock

- Hold the coupler lock in place.
- Pull the Shift Lock handle rearward into the locked position (Figure 3).

Step 4: Verify Proper Installation

- From the back of the coupler, confirm that the U-Bolt has passed completely through the holes in the back of the Shift Lock Gooseneck Coupler Lock (Figure 4).
 - If the U-Bolt is not fully through the holes, reposition the lock and repeat Steps 2-4.

Step 5: Install Locking Pin

- Insert the Locking Pin through the slotted hole on one side of the coupler lock and out the opposite slot (Figure 5).
 - The pin may be inserted from either side

Step 6: Lock the Pin

- Place the Lock into the protruding end of the Locking Pin.
- Push the lock shaft into the lock until you hear a click and the shaft stays in place (Figure 6).

Installation Complete



Figure 1: Shift Lock Handle pushed to the unlocked position



Figure 2: Gooseneck Coupler Lock placed into position



Figure 3: Shift Lock Handle pulled into the locked position

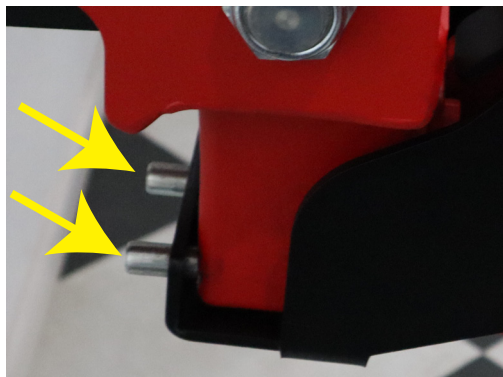


Figure 4: Gooseneck Coupler Lock installed properly

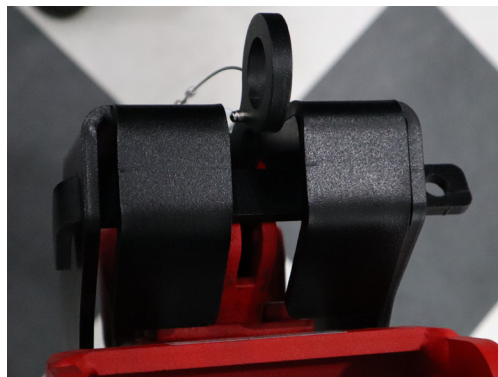


Figure 5: Slide Locking Pin through rectangular hole



Figure 6: Install Lock onto the protruding end of the Locking Pin