

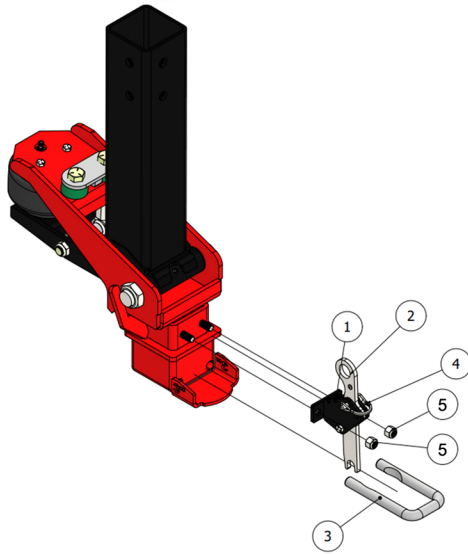


SHIFT LOCK COUPLER INSTALLATION INSTRUCTIONS


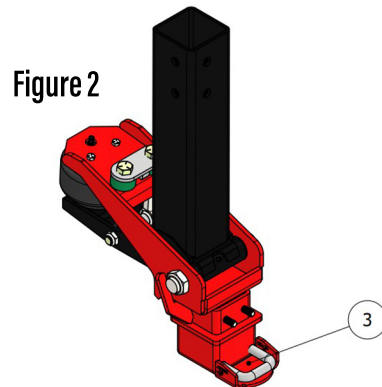


PARTS LIST			
ITEM	QTY	DESCRIPTION	
1	1	SHIFT LOCK BRACKET	
2	1	SHIFT LOCK HANDLE	
3	1	U-BOLT COUPLER LOCK	
4	1	SNAPPER PIN 3/8"D x 1-1/2"	
5	2	1/2-13" NC HEX NUT	

•Ensure that the U-bolt (item 3) is inserted into the two bottom holes on the front of the Gooseneck Surge hitch just above the coupler guard (see Figure 1 & Figure 2).

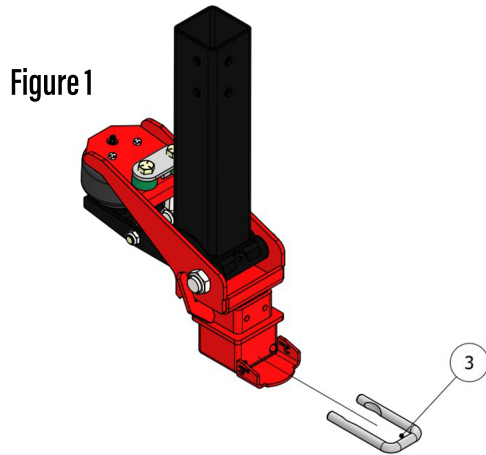

•Take the Shift Lock assembly (contains items 1, 2, and 4) while keeping the U-bolt inserted, take the open end of the Shift Lock handle and place it center of the U-bolt. Slide the Shift Lock assembly onto the protruding bolts (see Figure 3 & Figure 4).

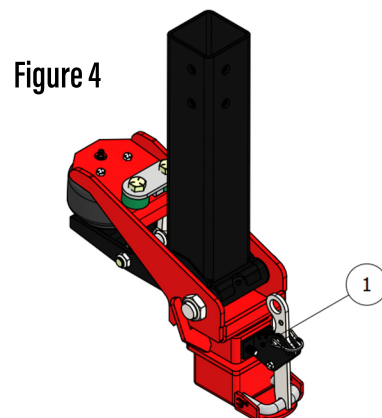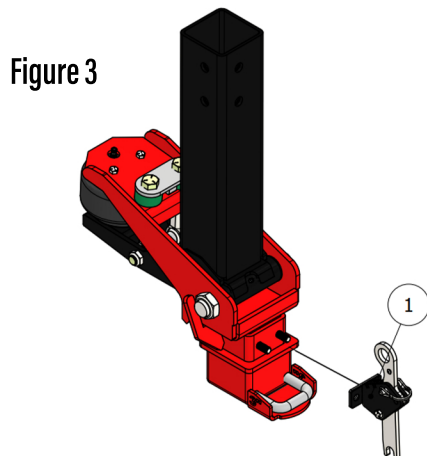

-Start the two nylon lock nuts (item 5) on the protruding through the Shift Lock bracket and tight them with a 3/4" socket.
There should be NO play between the red frame of the Gooseneck Surge hitch and the Shift Lock bracket (see Figure 5 & Figure 6).

Figure 5


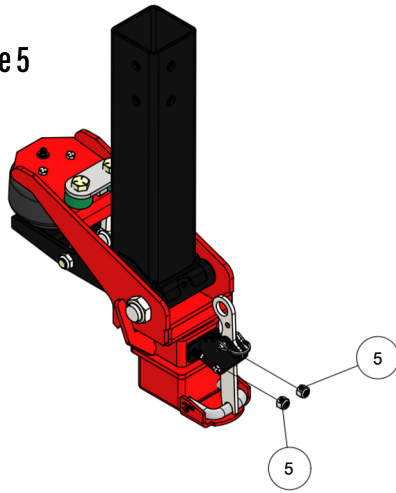


Figure 6

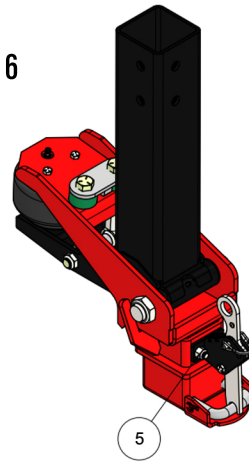

THANK YOU FOR CHOOSING SHOCKER HITCH

Shocker Hitch: Safer Smoother Towing - 2801 3RD AVE SW, JAMESTOWN ND, 58401 - (701)-707-2666

-Email: service@shockerhitch.com -Website: www.shockerhitch.com -Installation Videos on [Shocker Hitch](#) YouTube Channel